


Spare Power Supply Instructions

This document describes how to remove and replace an existing power supply module in a NEO 4000e library from Overland Storage.

WARNING: To reduce the risk of electric shock or damage to equipment, always remove any power cords while working with the unit.

AVERTISSEMENT: Pour réduire le risque de choc électrique ou endommagement de l'équipement, retirez toujours les cordons électriques en travaillant avec l'appareil.


CAUTION: While working with the unit, observe standard Electrostatic Discharge (ESD) precautions to prevent damage to micro-circuitry or static-sensitive devices.

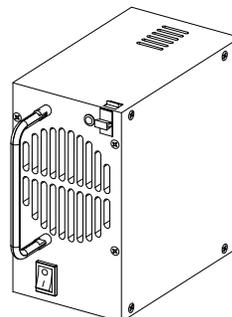

Replace the Power Supply

Exchange Power Supply

1. Power OFF the library and remove the **power cords**.
2. Unscrew the **lock plate** at the chassis edge securing both power supplies, retaining the screw.
3. While pressing down the power supply **lock**, firmly pull the **old assembly** out.
4. Slide the new **power supply** into the bay, pressing firmly until it is secure (lock clicks).
5. Using the retained screw, reinstall the **lock plate** securing the power supplies.
6. Reattach the **power cords** and power ON the unit.

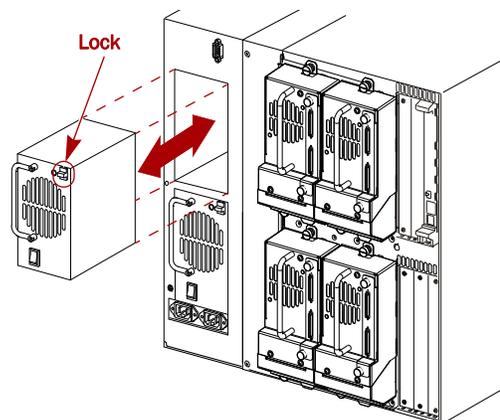

Return Old Part to Overland

For return shipping details of a replaced drive, go to:

<http://docs.overlandstorage.com/return-instructions>

1. Place the **old part** in the anti-static bag and put it in the replacement part's box.
2. Use a return merchandise authorization (RMA) number to return the part to **Overland Storage**.

