

Spare Bezel Instructions

This document describes how to remove and replace a bezel on a SnapScale X4 node from Overland Storage.

Bezel Replacement Procedure

Remove Old Bezel

1. If locked, **unlock** the bezel.
2. Press the **release button** toward the center and pull the right side out.
3. Pull the left **tabs** out of their slots and set the bezel aside.





Install New Bezel

1. Insert the **bezel tabs** in the tab slots on the left.
2. With the tabs still in the slots, move the right side of the bezel toward the unit until the **latch** clicks closed.
3. If required, relock the **lock**.



Return Old Part to Overland

1. Place the **old part** in the anti-static bag and put it in the replacement part's box.
2. Use an RMA to return the part to **Overland Storage**.
For return shipping details and RMA number, go to:
<http://docs.overlandstorage.com/return-instructions>

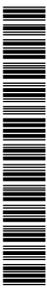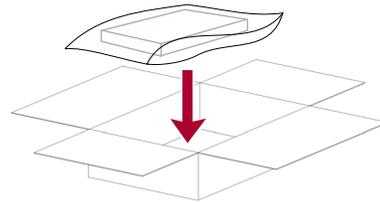



<http://support.overlandstorage.com>

You can get additional technical support on the Internet at the [Overland Storage Support web page](#), or by contacting Overland Storage using the information found on the [Contact Us](#) page on our web site.