


Spare Power Supply Instructions

This document describes how to remove and replace a power supply module in a SnapScale X4 node from Overland Storage.

WARNING: Hazardous voltage is present in the power supply cavity. Do not reach inside.

AVERTISSEMENT: Tension dangereux est présent dans la cavité d'alimentation en énergie. Ne pas toucher à l'intérieur.

CAUTION: While working with the unit, observe standard Electrostatic Discharge (ESD) precautions to prevent damage to micro-circuitry or static-sensitive devices.


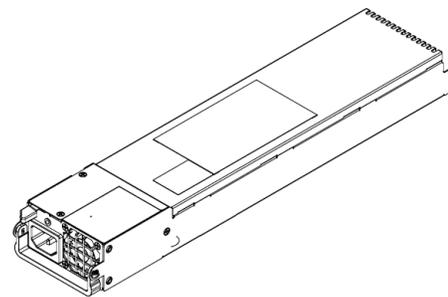


Replace Power Supply Module

Swap Out Module

Power supply modules are hot-swappable.

- Note which power supply **LED is amber** to determine the module to be replaced.
Depending on the type of failure, the LED may not even be lit.
- Unplug the **power cord** for that module.
- Press its **release latch** (upper left) toward the right and, using the handle, pull the defective module out.
- Set the **module** on an ESD secure surface.
- Slide the **new module** into the bay until the latch clicks.
- Plug the **power cord** into the new module.
- Verify the LED is **green**.

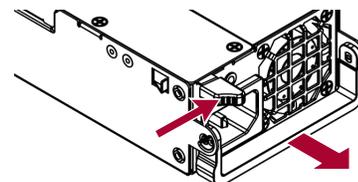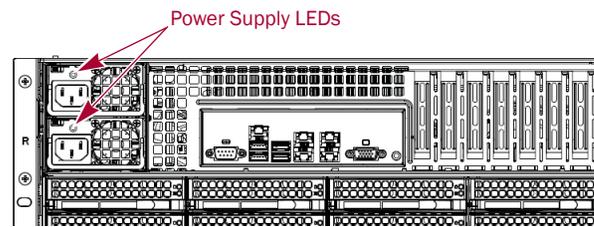

Return Old Part to Overland

- Place the **old part** in the anti-static bag and put it in the replacement part's box.
- Use an RMA to return the part to **Overland Storage**.
For return shipping details and RMA number, go to:
<http://docs.overlandstorage.com/return-instructions>

