

Add-on/Spare PCIe Card Instructions

This document describes how to add or replace a PCIe card in a SnapServer XSR 120 from Overland Storage.

WARNING: To reduce the risk of electric shock or damage to equipment, always remove any power cords while working with the unit.

WARNING: Um das Risiko eines elektrischen Schlags oder Schäden am Gerät zu vermeiden, ziehen Sie stets den Netzstecker, bevor Sie an der Einheit arbeiten.

AVERTISSEMENT: Pour réduire le risque de choc électrique ou endommagement de l'équipement, retirez toujours les cordons électriques en travaillant avec l'appareil.



CAUTION: While working with the unit, observe standard Electrostatic Discharge (ESD) precautions to prevent damage to micro-circuitry or static-sensitive devices.

Register Add-on PCIe Card

NOTE: If you are only replacing an existing PCIe card, skip to the next section, "Prepare the Unit."

When **adding** a PCIe card to your server, you must first register it to activate the warranty. Technical and warranty support are **not available** until this is done:

1. Go to the **Overland Storage** website (<http://www.overlandstorage.com/>).
2. Select **Service & Support > My Products**.
3. At the **Site Login**, enter your **e-mail address** and **password**, and click **GO**.
4. Click the **Manage Products** button.
5. From the Product Selector drop-down list, select the XSR 120 in which you are installing the PCIe card.
6. Click **Add a Component**.
7. Enter the **PCIe card information**.
8. Click **Save & Exit**.

IMPORTANT: Your warranty certificate will be emailed to you. Follow the instructions included to complete the process.

E-mail:

Password:

Remember Me

[Forgot your password?](#) [New member?](#)

MY PRODUCTS | **MY SUPPORT REQUESTS** | MY RMAS

Product Site:

Product Family:

Products Found: 2

Product Selector:

Actions:



Prepare the Unit

Power Off and Disconnect

If the unit is still running, power it down cleanly:

1. Use the Web Management Interface to shut down the server (**Maintenance > Reboot and Shutdown > Shutdown**).
2. When all the LEDs are off, disconnect the **power cords**.
3. Disconnect the remaining **cables** from the unit, noting their locations.



Remove the Front Bezel

1. Carefully take hold of the front **bezel** and pull it straight out from the appliance until the magnets release.
2. Set the bezel aside on a **secure surface**.





Remove the Drives

IMPORTANT: Overland recommends that you remove the disk drives to reduce the unit's weight prior to removal.

Remove **all** the drive carriers, noting from which slot they were removed. Blank carriers can remain in their bays.

NOTE: Do not remove the disk drives from their carriers. Doing so voids the drive warranty.

1. Press the release **button** on the right side of the carrier.
2. Using the built-in **handle**, pull the carrier out.
3. **Number the carrier** and set it on a secure surface.
4. Repeat **Steps 1–3** for **all** the remaining drive carriers.

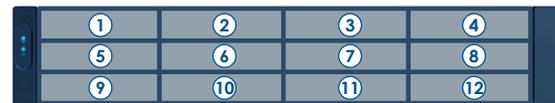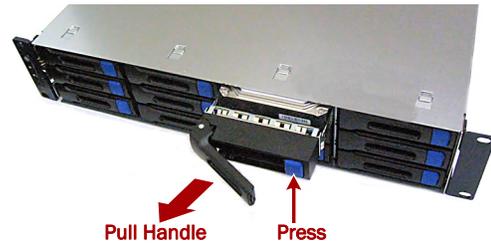


Remove Unit from Rack

WARNING: It is recommended that a mechanical lifter (or at least two people) be used during rack installation or removal to prevent injury.

WARNUNG: Um Verletzungen zu vermeiden, empfehlen wir zur Rack-Installation oder -Deinstallation die Nutzung einer mechanischen Hebehilfe (oder mindestens zwei Personen).

AVERTISSEMENT: Pour éviter toute blessure il est recommandé qu'un monte-charge (ou deux personnes au moins) soit utilisé lors de l'installation ou de l'enlèvement du support.


1. Remove and retain the **four screws** securing the unit to the rack.
2. With a lifter positioned in front of the array, release the rail locks and slide the **chassis** out onto the lifter.
3. Move the chassis onto a **secure surface**.

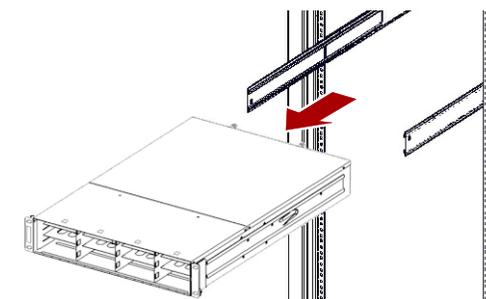

Install PCIe Cards

Remove Top Panels


1. Remove and retain the **two screws** located at the front edge of the panel.
2. Loosen the **two captive screws** securing the panel rear.
3. Slide the panel toward the rear about **one-half inch** (1.25cm), lift it off, and set aside.

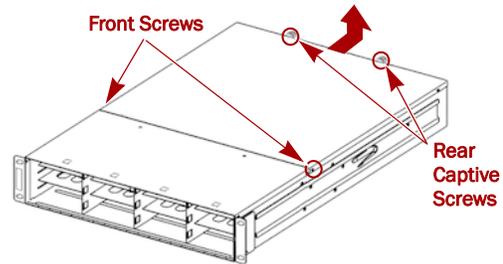

Add a New PCIe Card


NOTE: If you are only replacing an existing PCIe card, skip to the next section, "Replace a PCIe Card."

1. Remove and retain the **rear slot cover and screw** from an appropriate PCIe card slot.
2. Insert the **PCIe card** in the slot and seat it properly.
3. Secure it with the **retained slot cover screw**.

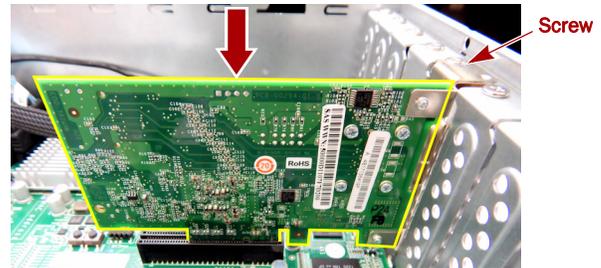

Replace a PCIe Card


1. Remove and retain the **slot cover screw** of the PCIe card being replaced.
2. Grasp the **PCIe card** and carefully pull it straight up and out of the chassis slot.
Set the PCIe card aside on an ESD-safe surface.
3. Insert the **new PCIe card** in the same slot and secure it with the retained slot cover screw.

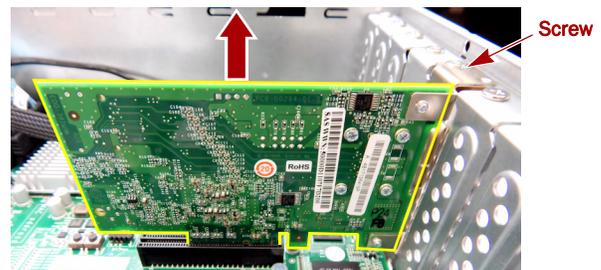

Reassemble the Unit


Reinstall Top Panel

1. Position the top panel with no more than **one-half inch** (1.25cm) extending out over the rear of the unit.
2. Slide the panel **forward** until it is fully seated.
3. Using the **two captive screws**, secure the panel rear.
4. Using the **two retained screws**, secure the panel front.

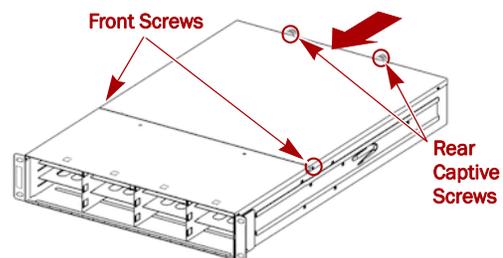

Return Chassis to Rack

1. Slide out the **middle rails** from the rack.
2. Using the mechanical lifter, position the **chassis** in front of the rack.
3. Insert the **inner rails** into the **middle rails** and slide the unit into the rack.
4. Using the **four retained screws**, secure the SnapServer to the front of the rack.

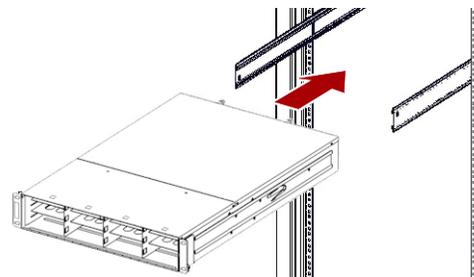

Reinstall Drives

Return the drive carriers to the same drive bays:


1. Referring to the numbering, position a **drive assembly** in front of its empty **bay** in the new chassis.
2. Slide the assembly in until the **latch** clicks, securing it.
3. Repeat [Steps 1–2](#) for **all** remaining drive carriers.

 **IMPORTANT:** To maintain proper airflow and cooling, a drive assembly or a blank carrier must be installed in every bay. No empty bays are allowed.




Reattach Cables and Power Cords

1. Reattach all **cables** to the same connections as before.
2. Attach the **power cords**.
3. At the front of the unit, press the **power switch** for less than a second to power the unit ON.

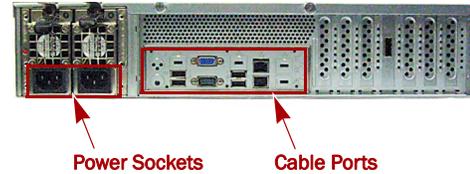

Reattach the Bezel

1. Position the **bezel** with the tabs aligned **inside** the top and bottom edges of the chassis.
2. Move bezel toward the unit until the **magnets** connect.
3. Verify that the bezel is **aligned** properly, all the LEDs are visible, and the Power panel is centered in the left flange.

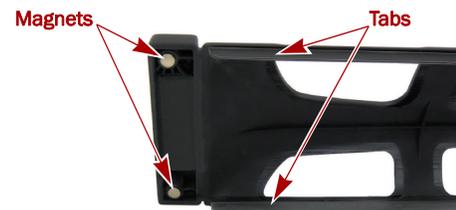

Return Replaced Parts to Overland

1. Place the **replaced part** in the anti-static bag and put it in the replacement part's box.
2. Use an RMA to return the part to **Overland Storage**.

For return shipping details and RMA number, go to:
<http://docs.overlandstorage.com/return-instructions>

